



**Parts and Components: Tent Body (1), Tent Poles (2), Carry Bag (1), Pole Bag (1)**

**1.** Unpack the tent and separate its components. Spread the tent on top of the mattress or a level surface. Make sure the extended foot pocket (A) is facing the end of the bed where you will lay your feet. The door side of the tent (B) should be placed close to the edge of the bed in order to make use of the plastic barrier around door. (fig. 1)

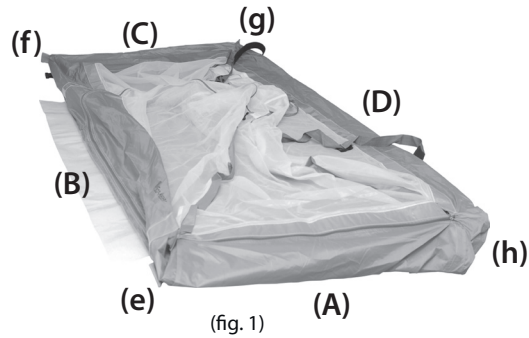


**2.** Located on the opposite side, the side of the tent with the door, side (D), there will be 2 long straps with slip resistant features. Take the two straps and securely wrap it around the mattress, pulling the straps underneath the mattress from side (D) to the opposite end, side (B). (fig. 2) Clip the straps together and tighten, for a secure fit. (fig. 3)

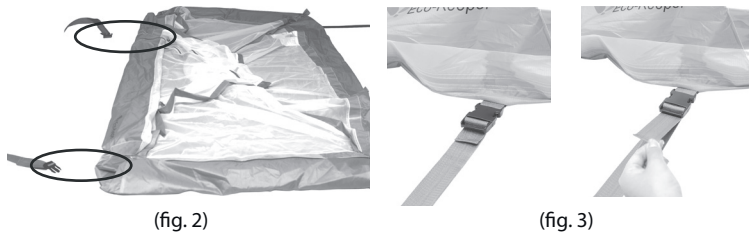


**3.** Assemble the 2 black shock-corded poles.  
NOTE: each inserting end of the poles should be firmly interlocked into each plain end.

**4.** The poles should be diagonally inserted from opposite corners, (e) to (g) and (h) to (f); forming an 'X' in the center of the tent as shown in the picture. (fig. 4)

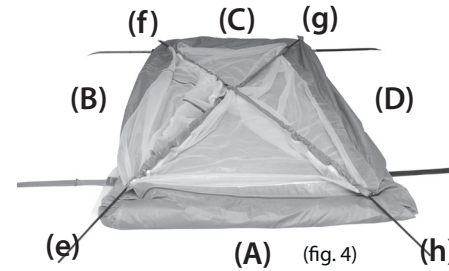

**5.** Insert 1 end of the pole in to the small pocket located at the end corners of the tent. (fig. 5) Go to the opposite end of the pole and gradually apply pressure, creating an arc. Insert end of the pole in to the small pocket at the opposite corner of tent to maintain tension across the seam line. Repeat with second pole.

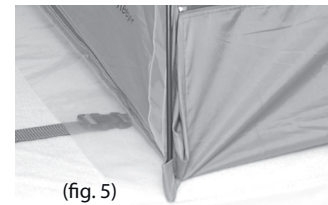

**6.** Your tent should now be free standing. On the very top of the tent where the poles form in to an 'X' there is a string that you can tie across the 'X' to lift the top portion of the tent from drooping. (fig. 6)



**Your tent is now ready for use.**

**note** Important Features

**Zipper pocket**

The Zipper Pocket feature securely holds the zipper into place to prevent any possible entrances for bed bugs.



**Extended Foot Pocket**

Unzip the zipper completely across the end of tent to detach zipper from the tent. The elongated flap should unfold to create an extended foot pocket.



**Plastic Barrier Around the Door**

The side of the tent where the door is attached should be in line with the edge of the mattress or level surface so that the plastic flap vertically falls in line adjacent to the mattress or level surface. (This feature will prevent the bed bugs from being able to climb up to the tent door for entry.)

